
X1000

Robot Vacuum Cleaner

User Manual

EN English

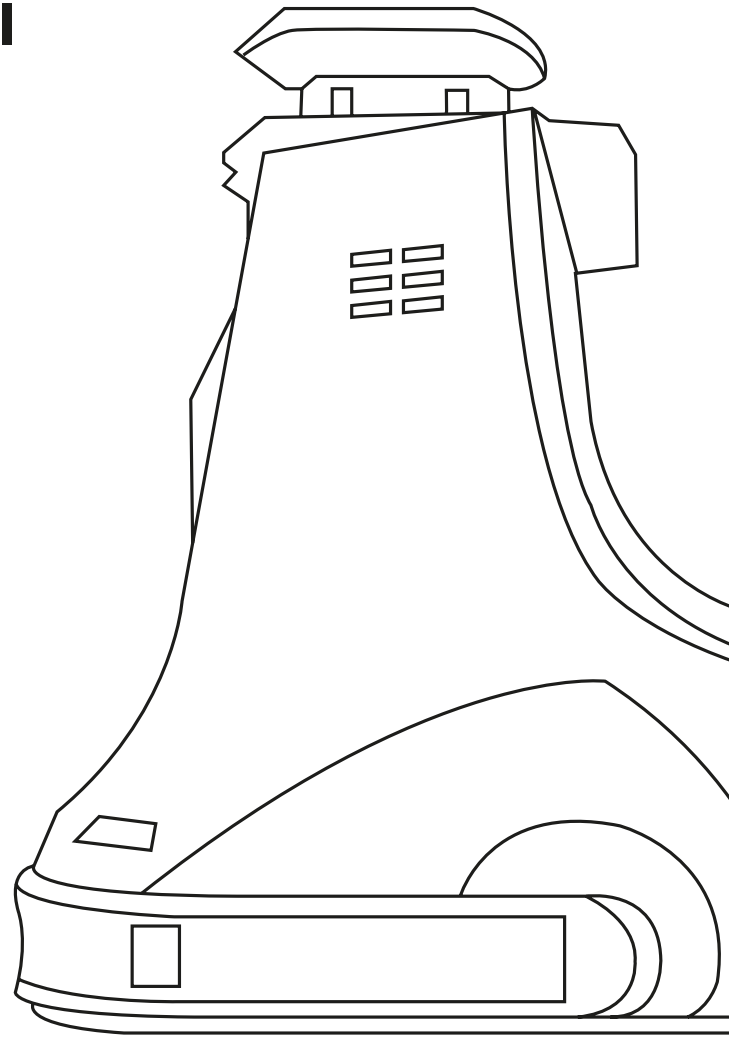

Find more information at
www.zaco.eu | ZACO

Dear Customer,

thank you for purchasing the **ZACO X1000** robot vacuum cleaner! You‘ve joined the millions of people who clean with robots – the smarter way to get it done. Please take a few moments to read this manual and get acquainted with your robot, to get the best performance from your robot.

If you have any problems, don‘t worry, contact our customer service or visit our website at **www.zaco.eu** for more information.

Best regards,
ZACO Customer Service

ZACO Customer Service

Customer Service Number

00800-42377961 (European Free Call)
0209-513038-38 (Direct Line – DE)

support@zaco.eu | www.zaco.eu

Robovox Distributions GmbH
Hamburger Straße 11 | 45889 Gelsenkirchen | Germany

Social Media

RobovoxZACO zaco_robot ZACO Robot

Contents

Safety Instructions	4
Safety	4
Product	5
Maintenance	7
Disposal	7
Product parts	8
List of Accessories	8
Main product	9
Charging station	10
Dust bin, Filter and Battery	11
Product operation	12
Preparation Before Operating	12
Installing the Battery	12
Charging Station	13
Charging	Auto Charge	14
Start	14
Pause	15
Cleaning Mode Selection	15
App download and operation instruction	16
App Download	16
Connect the App	17
Disconnect the App	20
Control Robot	20
Maintenance	21
Side Brush	21
Main Brush	21
Front wheel Maintenance	22
Dust Bin and Filter Maintenance	22
Filter Cleaning	23
Cliff Sensors and Charging Pins Cleaning	24
Maintenance And Replacing Accessories	25
Product Specifications	26
EU Declaration of Conformity	27

Safety instructions



WARNING

Before using the electrical device, basic precautions should always be followed. Read all instructions before using this appliance. Please save these instructions.

Use instructions | Safety

1 This device is not suitable to be used by children under 8 years old and people with physical or mental disabilities. If used by children, operate the device under the supervision of the guardian. Don't let the child sit on the robot. The robot is not a toy.

2 Please remove obstacles before using the robot. Such as power cords and other items. Please fold the edge of the carpet under the carpet. Do not let the curtain and tablecloth touch the floor.

3 If there are drops like stairs, please test if the robot can detect the edge without falling.

4 Please follow the instructions to operate the robot.

5 Make sure the power supply voltage matches the voltage marked on the charging base.

6 Indoor use only. Do not use outdoors.

7 Only use the original rechargeable battery and charging base provided by the manufacturer. Non-rechargeable batteries are strictly forbidden to use. Battery specifications please refer to the technical parameters.

Safety instructions

Use instructions | Product

8 Do not clean the robot with water.

9 Do not wipe the robot with wet cloth.

10 Do not use on wet floor.

11 Do not use in open fire and fragile environment.

12 Do not let clothes, hair and fingers come close to the product's openings or operating parts.

13 Do not let the robot suck any material that might block the suction pipe, such as stones, waste, paper, etc.

14 Do not let the robot absorb any flammable materials, such as gasoline and toner from a printer or photocopier.

15 Do not let the product to absorb any products that are burning, such as cigarettes, matches, ashes, and other products that may cause a fire.

16 Do not block the product on the suction vent. Do not use the robot if suction vent is blocked. Clean up dust, hair, cotton, etc., to ensure the air at the sucking mouth flows smoothly.

17 Do not use the charging base if it is damaged.

18 Use the power cord carefully to avoid damage. Do not use the power cord to drag and pull the product or its charging base. Do not let the product run on the power cord and keep the power cord away from heat.

Safety instructions

Use instructions | Product

19 If the power cord is damaged; it must be replaced by qualified maintenance staff.

20 Make sure the dust bin and filter are properly installed before using.

21 Do not use the robot in an infant sleeping room.

22 Do not use the robot when the product is damaged due to drop, water, or outdoor use. And please let the robot be repaired by the manufacturer and its service department.

23 If the Product is not being used for a long period of time disconnect it from the power supply.

Safety instructions

Use instructions | Maintenance

24 Before cleaning and maintaining the product, please turn off the power switch first.

25 Before cleaning and maintaining the product, please pull the power cord out of power socket.

Use instructions | Disposal

26 Before disposing of the product, please remove the product from the charging base, turn the power switch off and remove the battery.


27 Before disposing of batteries, you must follow local laws and regulations.


28 Even if the product is severely damaged, it is forbidden to incinerate the product and the battery. This may cause an explosion.


29 Please follow the instructions to use the product. Due to improper use of any loss and damage, the company will not take any responsibility.


Product parts


List of Accessories

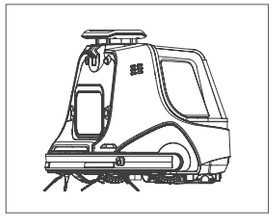
X1000 (with two batteries)

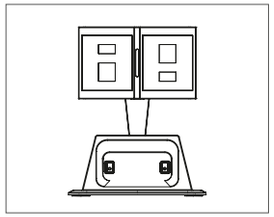

Charging station

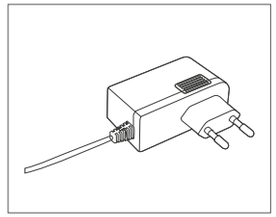

Charging cable

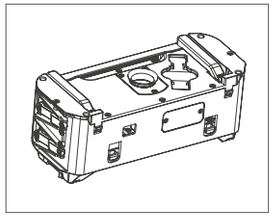
Suction Port Modules

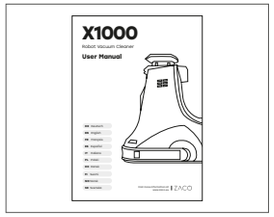


User Manual

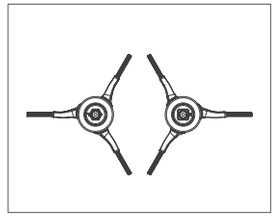

2x Left and Right Brush

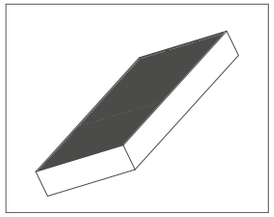
High Performance Filter

Product parts


Main product

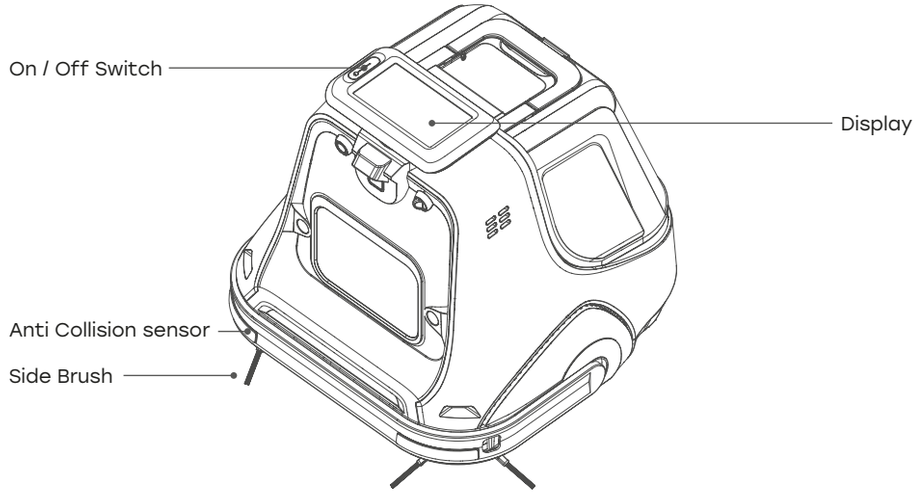

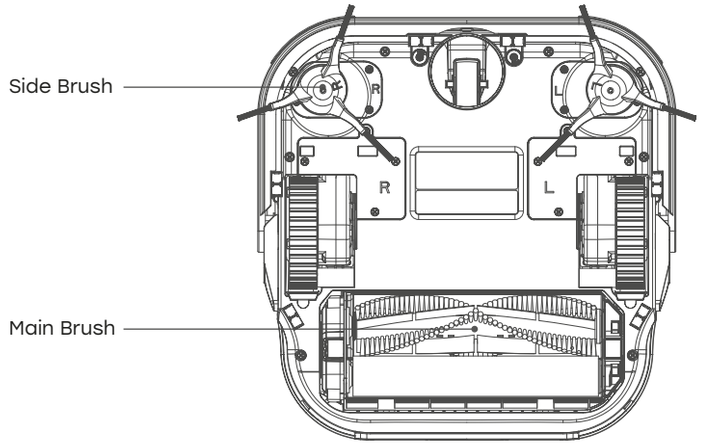


Product parts

Charging station

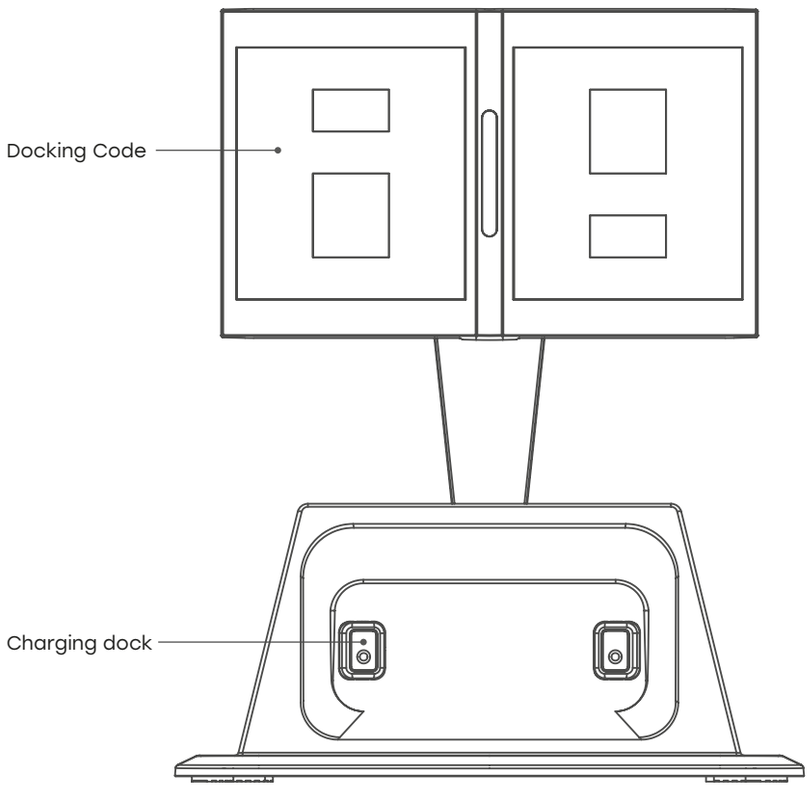

Product parts


Dust bin, Filter and Battery

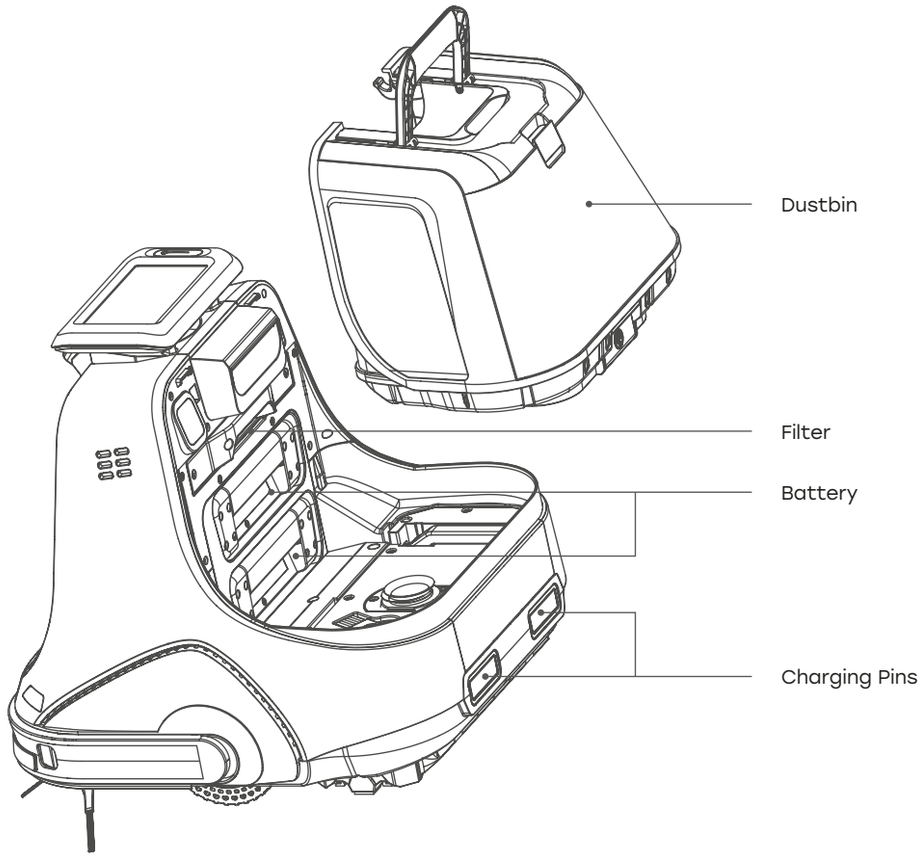

Product operation


Preparation Before Operating

1. Take the robot out of the box. Lift up the dustbin using the lever and remove the stickers and Packaging materials from the dust bin and the robot vacuum.
2. Put the dustbin back into place and lock it in with the lever.

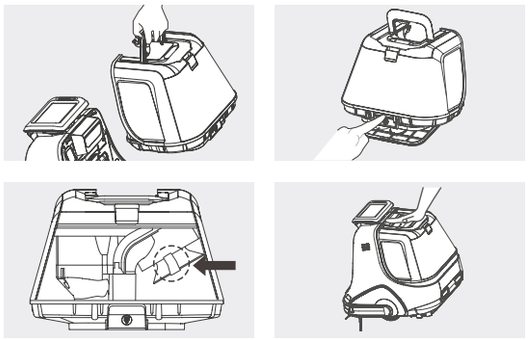

Installing the Battery


Lift up the Dustbin, put the battery into the battery slot and press the battery in with both hands, until you hear a "click". When you hear the "click" sound, the battery is successfully installed.

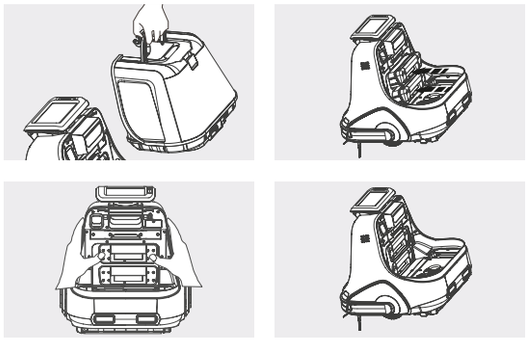



Product operation

Charging Station

1. Connect the adapter and charging station.
2. Place the charging station flat against the wall, the surrounding area is open and should not be covered by objects.
3. Connect the charging station to the power supply.
4. Press the power button to start up the Vacuum Cleaner.

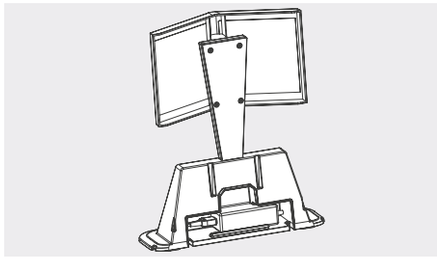

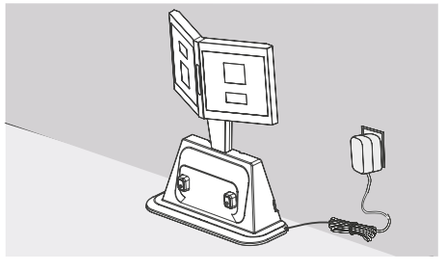

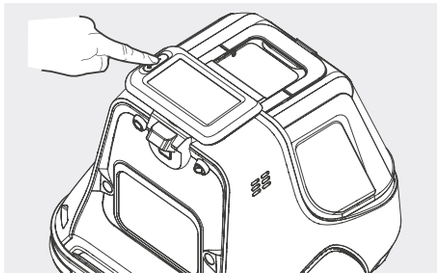

NOTE After cleaning is finished, it is recommended not to turn off the robot; keep the robot charging in the charging station so that it is ready to go the next time.

Product operation

Charging | Auto Charge

Press the recharge button on the robot panel or App, the device will automatically search for the charging station to charge.




NOTE Pay attention to cleaning the charging dock of the charging station, otherwise the charging may not be possible.

NOTE 1. For daily use, please place the robot on the charging station, and ensure that the charging station is connected to the power supply and the robot power switch is on.
2. If the robot is not used for a longer time, please fully charge the machine, turn off the power, and store it in a dry and ventilated place.

Start

1. Make sure the power is on.
2. Press the button on robot & APP to start.

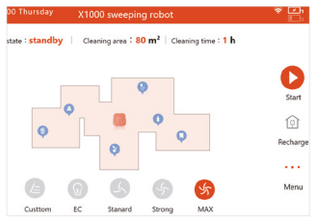

NOTE


If the robot is in sleep mode, press again to wake up the robot to enter function selection mode, press the button again then the machine will start working automatically.

Product operation

Pause

Press the button on robot or App to pause.

NOTE The machine can be re-operated after the machine has been paused.

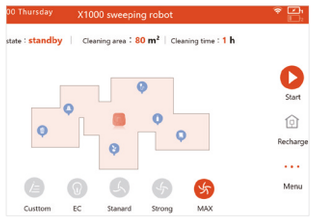

Cleaning Mode Selection

Energy Saving

Press the energy saving button on the robot.

Standard Mode

Press the standard button on the robot.

Strong Mode

Press the power button on the robot.

Max Mode

Press the MAX button on the robot.

Customize

Press the customize button to customize the side brush speed, roller brush speed & suction power.

App download and operation instruction


App Download

Scan the QR code or search for "**ZACOHome**" to download, install and open the ZACOHome App.

Connect the App



Turn on the Robot.

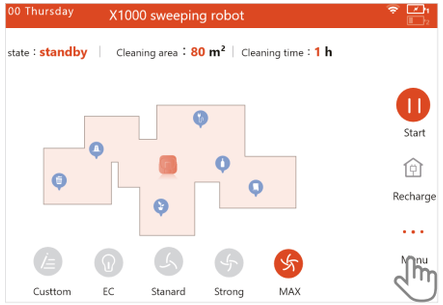


Click the menu button.


NOTE Connect your phone to an available WiFi network in the room. Make sure your phone is connected to an available WiFi network and has a good signal quality.

App download and operation instruction


Connect the App

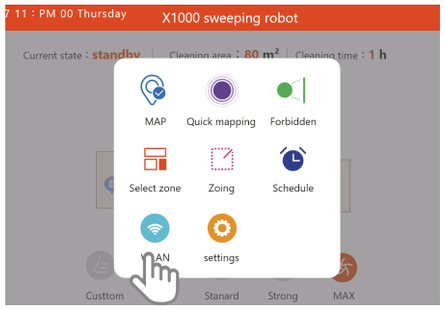


Click the Wi-Fi button on the Robot or select the Settings button and click Settings to enter the Wi-Fi password.

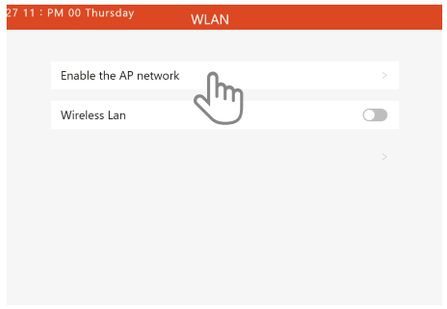

Select “Enable the App Network” to connect to AP network.

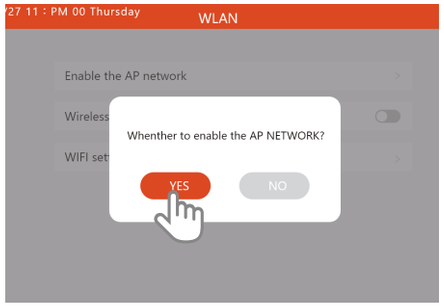

Click OK, the device will prompt "Wi-Fi connecting".

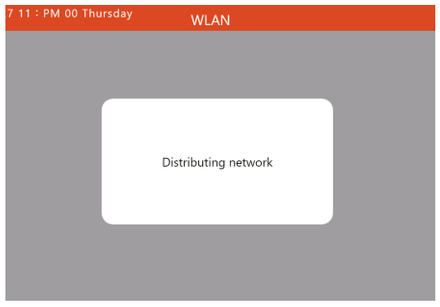


The robot prompts: the network is being configured.

App download and operation instruction


Connect the App




Select country or region.

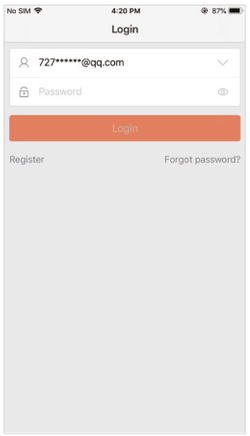

Register or sign in with your account.
(Read and agree with User Registration Agreement).

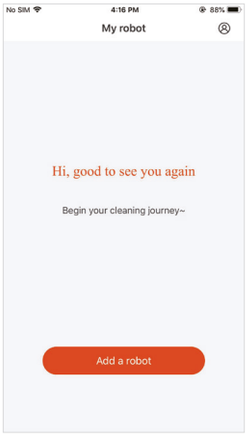


Select to add the robot.

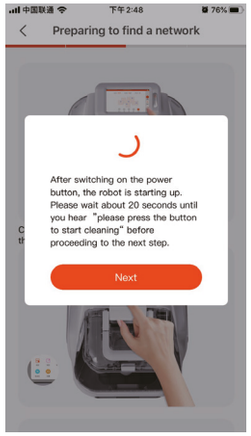

Confirm to continue.

App download and operation instruction


Connect the App

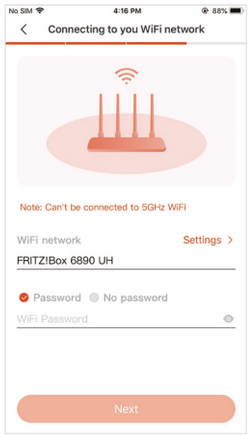

Fill in the WIFI password and continue.



Click on Settings to got to the phone settings, select the wireless network from host: adh-XXx

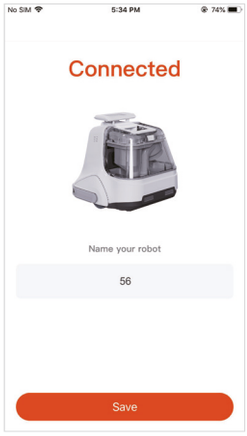

The connection is successful.

NOTE If the connection fails, please restart the device, and follow the steps to configure the network again.


App download and operation instruction


Disconnect the App


1. In the device list of App, click and hold the device you want to disconnect and swipe to the left. The diconnected button will appear on the right side of the device.
2. Click the diconnected button to disconnect the device.

Control Robot

1. Click to select the device you want to control in the device list.

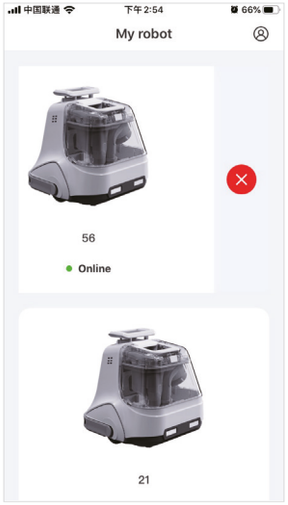

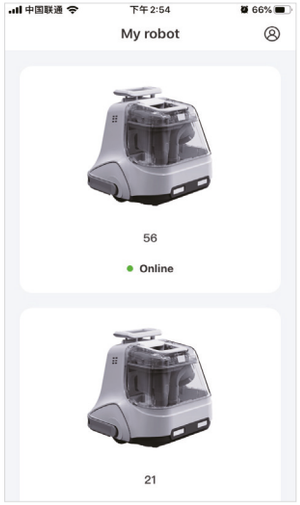


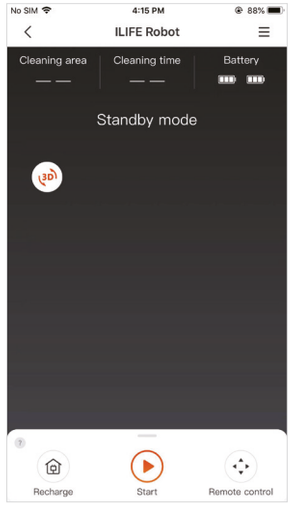

Maintenance


Side Brush Maintenance

1. Remove the side brush and clean the brush, remove any hair, or dust particles.

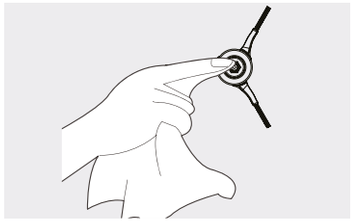

Main Brush Maintenance

1. 1. Remove the dustbin 2. Lift up the suction module by it's leaver. 3. Press the two buttons to release the brushes. 4. Take out the Brushes 5. Use the cleaning tool to remove the hair wrapped around the roller brush.


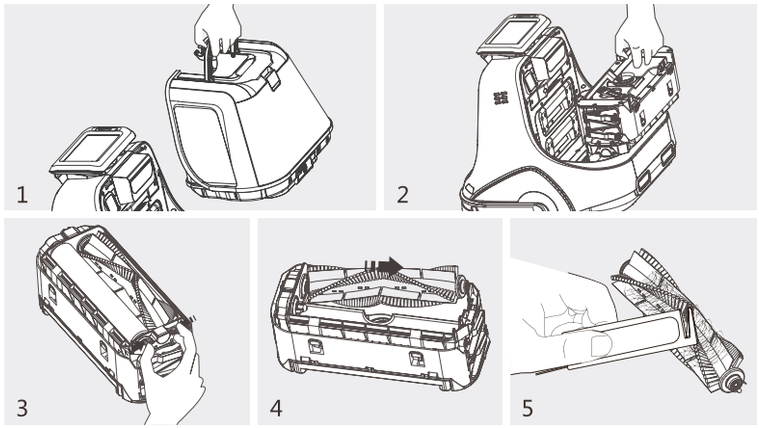


NOTE When cleaning and maintaining the device and accessories, please turn off the device and unplug the power supply of the charging station.

Maintenance





Front wheel Maintenance

1. Remove the front wheel and clean it to reduce the entanglement of hair and other particles.

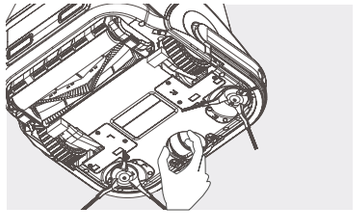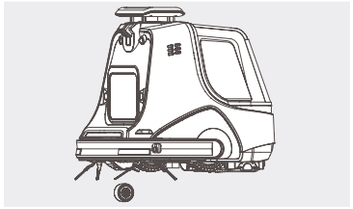Dust Bin and Filter Maintenance





1. Please clean the dustbin after each use.
2. Remove the dustbin. Press the button on the dustbin to release bottom cover of the dustbin automatically and empty the dustbin into a garbage can.
3. Remove the filter from the dustbin, wash the filter with clean water, and make sure it is completely dry when reinstalling the filter.

Maintenance

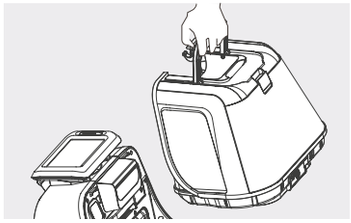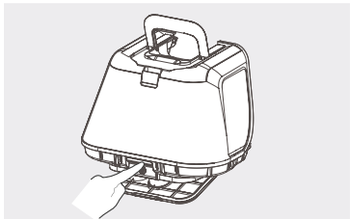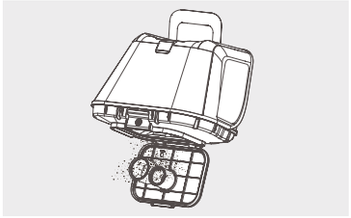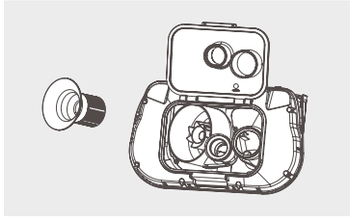Filter Cleaning


1. Remove the HEPA 13 filter, wash with clean water, and place in a cool, ventilated place to dry, do not squeezing the high-performance filter.




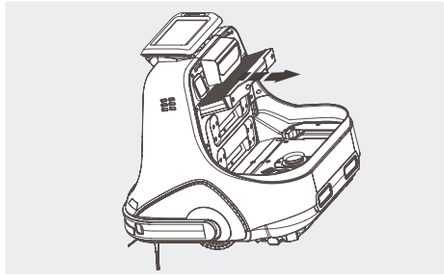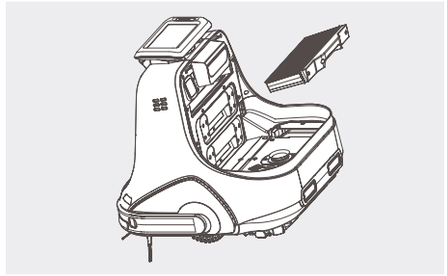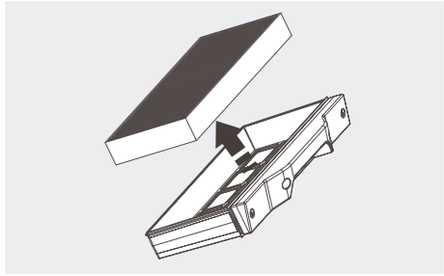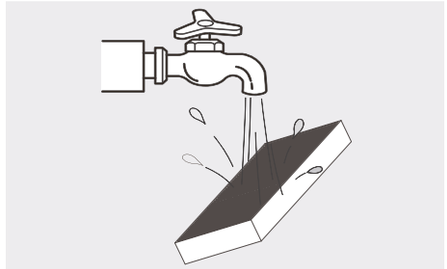


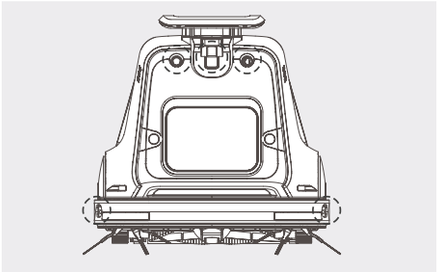
Maintenance

Cliff Sensors and Charging Pins Cleaning

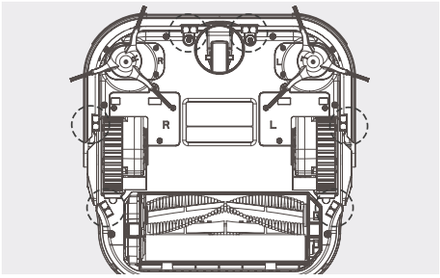1. Gently wipe the sensor and battery connector with a cleaning tool:

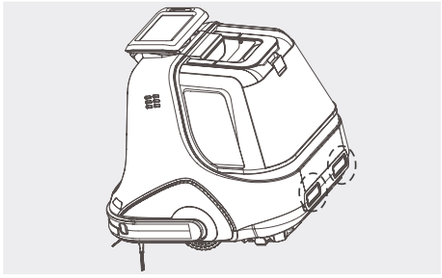





NOTE

Clean the charging dock when there is dust on the cover.

When the device is not used for a long time, please take out the battery.
And store it in a cool and dry place.

If the battery leaks, please remove the battery and exchange the battery.
Dispose of the leaking battery as regulations require.

This device uses a long-life battery which does not need to be replaced frequently.
If you need to replace it, please contact our after-sales service.

Maintenance

Maintenance And Replacing Accessories

Part	Cleaning	Replace
Dustbin	After each use	Only if defective
Filter	Once a week	Replace the new one every three to five months
Roller Brush	Once a week	Only if defective
Side Brush	Once a week	Only if defective
Charging Station	Once a week	Only if defective

Product Specifications

Description	Specification
Nominal voltage	DC 25.2 V
Motor power	250 W
Charging voltage	32 V
Charging time	<300 min
Battery capacity	4700 mAh
Product size	376 x 372 x 365 mm
Maximum vacuum	20 kPa
Net weight	11.3 kg
Working times	210 min
Dust cup capacity	3 l

EU Declaration of Conformity

Robovox Distributions GmbH hereby declares that the **ZACO X1000** radio complies with Directive 2014/53/EU.
The full text of the EU Declaration of Conformity can be found on the Internet address **https://conformity.zaco.eu/download/x1000.pdf**

The radio operates in the ISM band between 2412 and 2484 MHz.
The antenna gain is 1.5 dBi.

ZACO